

Giant Cool Wave Slide




- Innovative wave design
- Made of durable, colorful, fade resistant, UV-treated plastic
- Smooth, rounded construction
- Easily attaches to 60"-66" slide platforms
- Mounting hardware included
 - No sharp edges
 - Maintenance free

Lumber Requirements:
 One 2" x 4" x 12' (not included)
 Twelve 16D galvanized nails

LIFETIME WARRANTY
Will Not Crack or Break

Swing-N-Slide Corporation guarantees every slide and climbing wall against cracking or breaking under normal use. If either ever breaks or cracks, call us for a free replacement.

1-800-888-1232



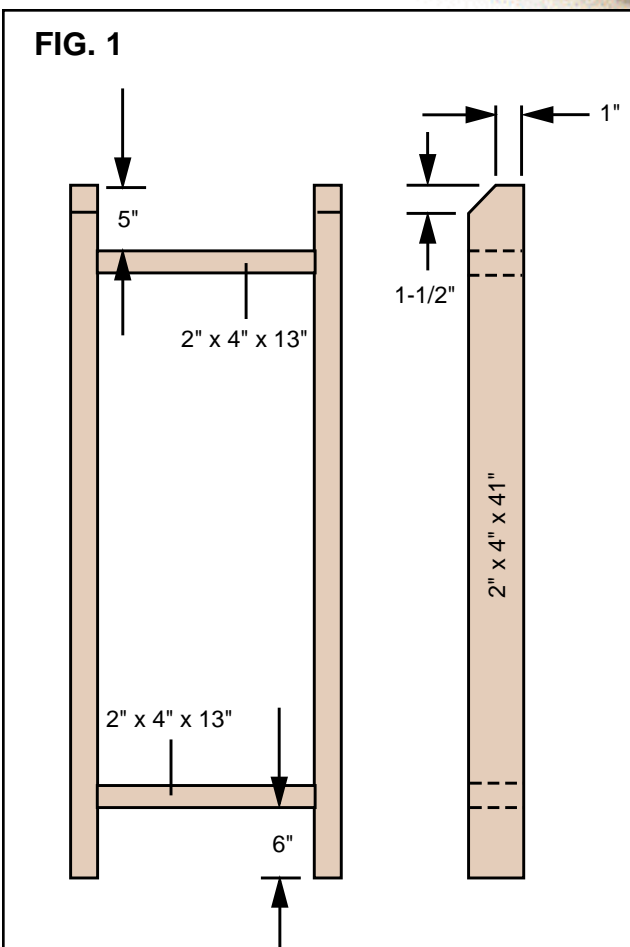



THIS SLIDE MUST NOT BE INSTALLED OVER CONCRETE, GRAVEL, ASPHALT OR OTHER HARD SURFACES WHICH COULD CAUSE INJURY IN THE EVENT OF A FALL

Installation Instructions

IMPORTANT: Place the slide on level ground, not less than six feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires. Protective surfacing must extend a **minimum** of 6 ft. (1.828m) in all directions from the perimeter of the equipment or from the outermost edges of any component. A slide extending beyond the platform must have protective surfacing at least 6 ft. (1.828m) out from both sides as well as the end. An area of 21" on either side of the slide should be free of obstructions which a child's arm could contact.

1. Cut lumber as indicated in Figs. 1. You will require two 41" legs, two 13" cross supports and one 18" stake. Angle the tops of the two 41" legs as indicated.
2. Assemble the slide support using three (3) 16D galvanized nails at each joint.
3. Line up slide 90° to the platform and mark three holes 2-1/2" from the end (See Fig. 2). Drill three 3/8" holes through the slide platform. **NOTE:** If the slide platform is not made of 5/4" lumber you must counterbore the underside of slide platform 5/8" deep using a 1-1/8" spade bit.
4. Attach the slide to the platform with included carriage bolts, washers and loc nuts. **CAUTION:** Where bolt is exposed, saw off exposed threads with a hack saw and remove all sharp edges with a metal file.
5. After the slide is attached to the platform, attach the slide support to the slide using one screw and flat washer as indicated in Fig. 4. Square the support to the ground and bury the ends of the brace. **NOTE:** The bottom cross support should rest firmly on the ground.
6. Prepare a level area of ground where the bottom of the slide rests 2" below grade (Fig. 3).
7. Mark where the slide's bottom center meets the ground and drive a 2" x 4" x 18" stake until its top is flush to the grade prepared in Step 6. (See Fig. 3)
8. Using a 1/8" drill bit, drill a pilot hole through the bottom lip of the slide and into the stake, and attach the two using the screw and washer provided. (See Fig. 3) **NOTE:** Be careful to drill into the center of the stake's end. Level grade around the base making sure the screw head is buried and presents no hazard.

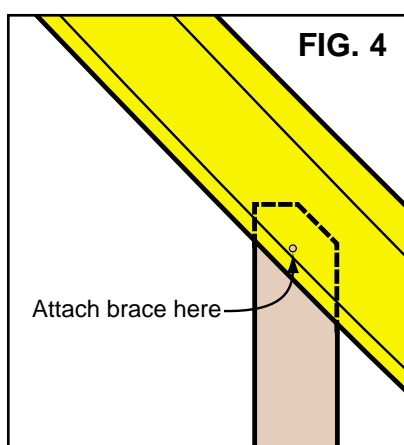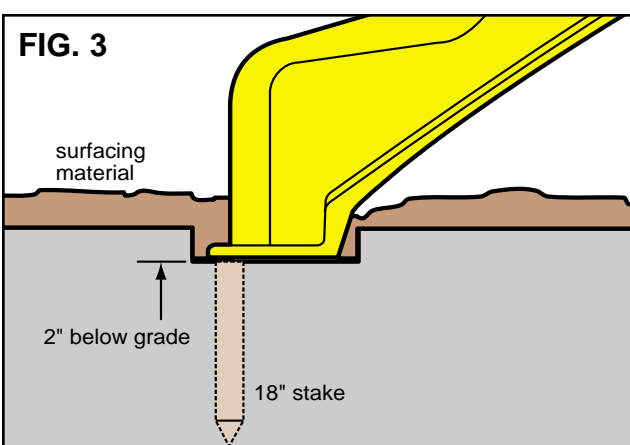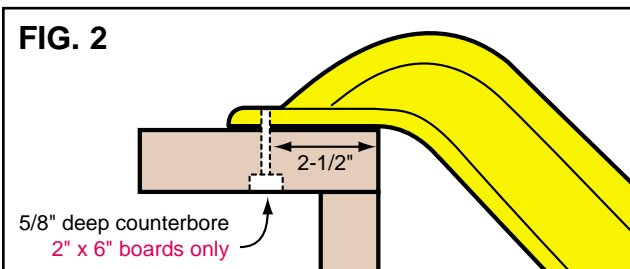

CAUTION: FAILURE TO PROPERLY SUPPORT AND STAKE THIS SLIDE TO THE GROUND COULD RESULT IN SERIOUS INJURY TO CHILDREN FROM LIFTING THE END OF THE SLIDE.

© 2001 Swing-N-Slide
 1212 Barberry Drive
 Janesville, WI 53545
 1-800-888-1232
 www.swing-n-slide.com

LA 4450

