

NE 4710



SpeedWave™ Slide



The EXTRA-DUTY Speedwave Slide compacts speed, waves and bumps into this exciting slide. This slide features:

- Deep, smooth, lumber-free handrails
- "Scoop" design to ensure even the youngest rider remains in a safe, upright position
- Molded one-piece design using unbreakable, high density polyethylene
- Does not require additional bracing
- Easily mounts to 48" decks of the Eagles Nest, Titan, Pioneer or Competitor
- Includes all hardware needed



LIFETIME WARRANTY

Will Not Crack or Break

Swing•N•Slide Corporation guarantees every slide and climbing wall against cracking or breaking under normal use. If either ever breaks or cracks, call us for a free replacement.

1-800-888-1232



Lumber Requirements:
NOTE: Pioneer (NE 4433) requires only an 18" stake for installation
One 2" x 4" x 8' (not included)





THIS SLIDE MUST NOT BE INSTALLED OVER CONCRETE, GRAVEL, PACKED EARTH, ASPHALT OR ANY OTHER HARD SURFACE WHICH COULD CAUSE SERIOUS INJURY IN THE EVENT OF A FALL.

Installation Instructions

IMPORTANT: Place the slide on level ground, not less than six feet (1.828 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires. Protective surfacing must extend a **minimum** of 6 ft. (1.828m) in all directions from the perimeter of the equipment or from the outermost edges of any component. A slide extending beyond the platform must have protective surfacing at least 6 ft. (1.828m) out from both sides as well as the end. An area of 21" on either side of the slide should be free of obstructions which a child's arm could contact.

1. Cut lumber as indicated in Fig. 1. You will need one 18" stake (not shown), two 5" supports and one 23-1/4" deck board.
2. Attach the 2" x 4" x 5" deck supports as indicated in Fig. 2 using three screws (provided) per board. **NOTE:** Supports should be positioned so the 2" x 4" x 23-1/4" board is flush with the corresponding deck boards. Place 2" x 4" x 23-1/4" deck board on top of the supports and secure using two screws (provided) per joint (see Fig. 2).
3. Line up slide 90° to the platform and mark hole locations 1-1/2" from the front edge of the 2" x 4" x 23-1/4" board (See Fig. 3). Remove slide and drill 1/8" pilot holes at the corner hole locations. Drill 3/8" holes through the remaining hole locations. Counterbore the underside of slide platform 5/8" deep using a 1-1/8" spade bit (See Fig. 3).
4. Attach the slide to the platform with screws at the corner hole locations and carriage bolts, washers and loc nuts at the remaining locations.
5. Prepare a level area of ground where the bottom of the slide rests 2" below grade (Fig. 4).
6. Mark where the slide's bottom center meets the ground and drive a 2" x 4" x 18" stake until its top is flush to the grade prepared in Step 5 (See Fig. 4).
7. Using a 1/8" drill bit, drill a pilot hole through the bottom lip of the slide and into the stake, and attach the two using the screw and washer provided. (See Fig. 4) **NOTE:** Be careful to drill into the center of the stake's end. Level grade around the base making sure the screw head is buried and presents no hazard.

CAUTION: FAILURE TO PROPERLY STAKE THIS SLIDE TO THE GROUND COULD RESULT IN SERIOUS INJURY TO CHILDREN FROM LIFTING THE END OF THE SLIDE.

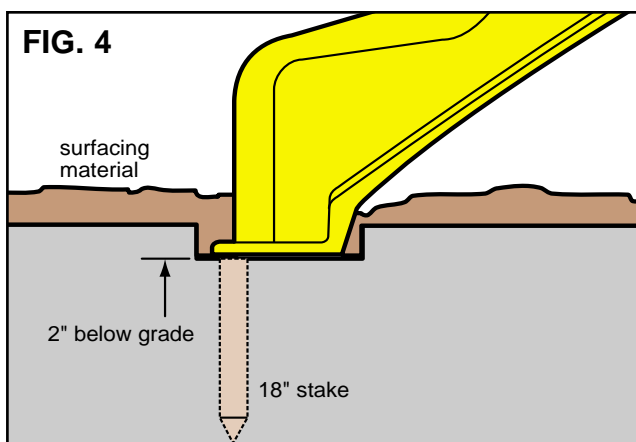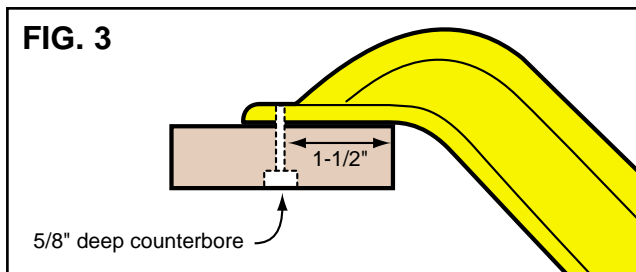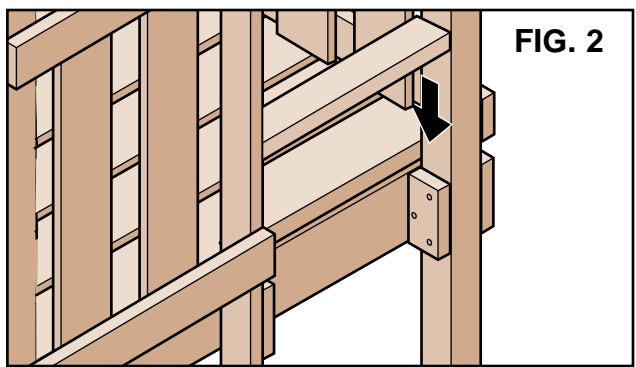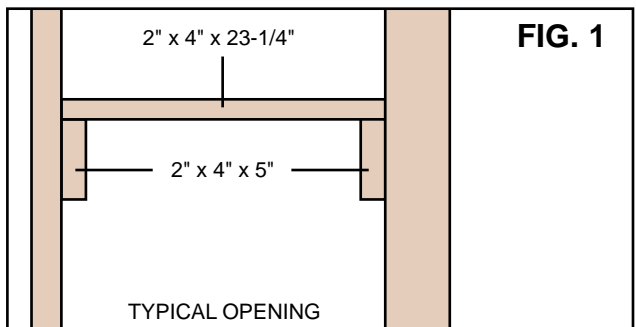

© 2001 Swing•N•Slide
 1212 Barberry Drive • Janesville, WI 53545
 1-800-888-1232 www.swing-n-slide.com

